

# Lofting Instructions

17th, Bailey, Frontier, Sanford  
wooden stabilizer bar




HOUSING &  
RESIDENTIAL LIFE



**1** Remove mattress from frame and insure bed frame is secured in middle notch of bed ends.



**3** Attach stabilizer bar to bed ends facing inwards.

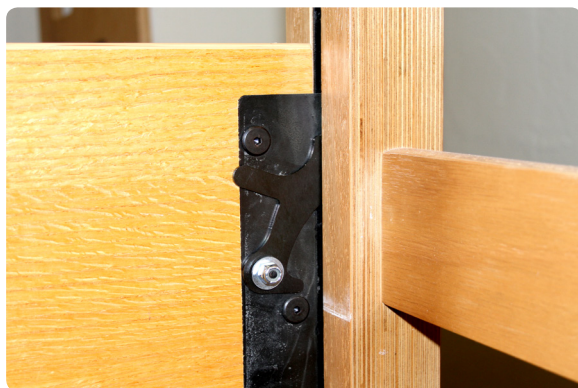

**2** Lift latches to upward position.



**4** Lift bed frame onto base.



**5** Add mattress and safety rail.

**Caution:** Be careful not to hit the sprinklers while lifting the bed, and **ONLY** attempt with at least 2 people.

**Need assistance?** If you need something repaired or replaced in your room, submit a Fix It request: [housing.umn.edu/FixIt](https://housing.umn.edu/FixIt)