


Lofting Instructions

Mark G. Yudof Hall
wooden stabilizer bar




HOUSING &
RESIDENTIAL LIFE

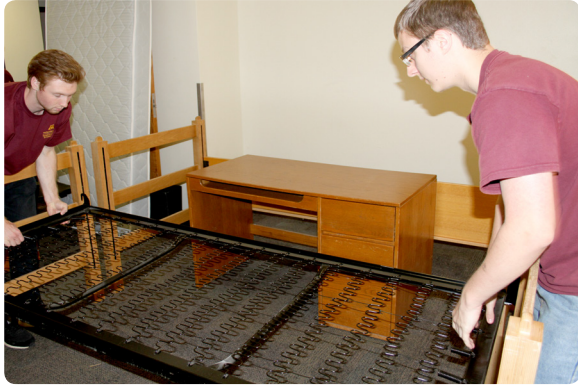

- 1** Remove mattress from frame and insure bed frame is secured in middle notch of bed ends.



- 3** Attach stabilizer bar to bed ends facing inwards.

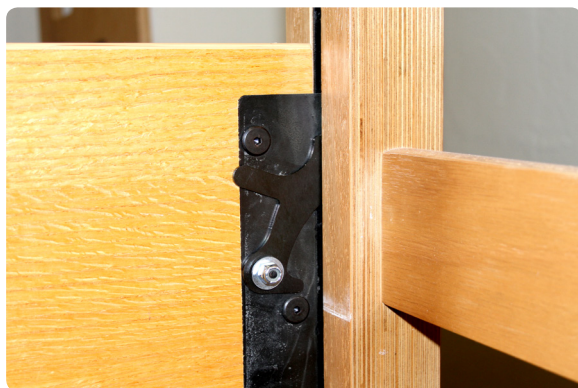

- 2** Lift latches to upward position.



- 4** Lift bed frame onto base.



- 5** Add mattress and safety rail.

Caution: Be careful not to hit the sprinklers while lifting the bed, and **ONLY** attempt with at least 2 people.

Need assistance? If you need something repaired or replaced in your room, submit a Fix It request: housing.umn.edu/FixIt